



[FAQs](#) > [PRO-FIND](#) > [PRO-FIND 40](#) > [PRO-FIND 40 - Quick Help](#)

PRO-FIND 40 - Quick Help

Sarah Schernthanner - 2026-02-26 - [PRO-FIND 40](#)

Quick Help

1. Set Up

Insert the 9V PP3 battery.
Keep O-ring and threads clean; lubricate with silicone grease.

2. Power On

Press the power button (>0.5 s).

3. Adjust Sensitivity

Use + / - buttons → 5 levels.

4. Audio & Ferrous Audio

Hold buttons to enable/disable audio or ferrous audio.

5. Rapid Re-Tune

Short press to instantly re-tune.

6. Inactive Alarm

Alarm after 3-5 min, auto-off after >5 min.

7. Power Off

Press power (>0.5 s).