



[FAQs](#) > [VANQUISH](#) > [VANQUISH 340](#) > [VANQUISH 340 - Quick Help](#)

VANQUISH 340 - Quick Help

Sarah Schernthanner - 2026-03-06 - [VANQUISH 340](#)

Quick Help

1. Assembly

Connect the shaft sections and lock them in place.
Attach the search coil and tighten the coil bolt securely.
Wrap the coil cable neatly up the shaft.
Insert 4× AA batteries into the battery compartment.

2. Power On & Startup

Press the Power button to turn the detector on.
An Automatic Noise Cancel runs for a few seconds - keep the coil still.
The detector is ready after approx. 5 seconds.

3. Search Modes

Use the Mode button to cycle through: Coin Mode Rejects iron and small non-ferrous trash like foil.
Best for parks, beaches, and trashy areas.
Jewellery Mode Rejects only iron.
Good all-round mode for typical treasure hunting.
All-Metal Mode Detects all metal types including iron.
Useful for checking mixed signals or searching everything.

4. Controls Overview

- 1 Power - On/Off
- 2 Volume - Adjusts loudness (3 levels)
- 3 Sensitivity - Adjusts detection depth/stability (4 levels)
- 4 Mode - Switches search modes
- 5 Target ID Guide - Helps identify expected target range

5. Display Indicators

Battery Level
Volume Level
Sensitivity Level
Target ID Number (-9 to 40)
Depth Gauge (4 levels)
Search Mode Icon

6. Basic Operation

Tips Sweep the coil low and level across the ground.
Move slowly for best target separation.
Check the Target ID for consistency before digging.