



[FAQs](#) > [X-TERRA](#) > [X-TERRA ELITE](#) > [X-TERRA VOYAGER ELITE - Quick Help](#)

X-TERRA VOYAGER ELITE - Quick Help

Sarah Schernthanner - 2026-02-27 - [X-TERRA ELITE](#)

Quick Help

1. Turn On

Press the Power button.
Wait 1 second for startup.

2. Select Search Mode

Choose a mode suited for your terrain:
Park - general detecting, high trash areas.
Field - historical sites, coins & artefacts.
Beach - dry/wet sand, surf, underwater.

Each mode has 2 profiles (1 = general, 2 = more sensitive).

3. Noise Cancel

Use Noise Cancel from the Settings Menu.
Auto Noise Cancel takes ~8 seconds.

4. Start Detecting

Sweep the coil side-to-side, close to the ground.
Keep the coil moving for detection.

5. Sensitivity

Adjust with + / - (1-25 levels).
Choose the highest stable level.

6. Pinpoint

Press Pinpoint to locate the center of the target.
Signal & visualization strengthen as you center.

7. Battery

Rechargeable Li-Ion, charging time 5-6 hours via USB-A